

In-Cab Inspection w/ Brake Check

Safety	Items		
	Fire Extinguisher: Properly charged and	d rated. And it is properly mounted and secured	
	Triangles: There must be three, properly or cracked.	mounted and secured, clean, and not broken	
	Fuses: Check for spare fuses. If vehicle	does not use fuses, mention to tester.	
	Seatbelt: Properly mounted and secure not cut or frayed.	d, latches and unlatches, adjusts properly, and	
	Horn(s) : Test horn(s) is working properly be part of the next section as some truck	 Both street and air horn if equipped. (This may s require key on to test). 	
Key or	n, Engine off (must say this and demon	strate)	
☐ Mirrors: Clean, not cracked, properly adjusted, and no illegal stickers.			
	☐ Windshield: Properly mounted and secured, not cracked, and no illegal stickers.		
	☐ Wipers: Arms and Blades are properly mounted and secured and have no damage.		
	Wiper fluid must work properly.		
☐ Heater/Defroster: Must ensure both work properly.			
☐ Dashboard Indicator Lights:			
] High Beams	☐ Right Turn	
] Left Turn	☐ 4-way Flashers	
Safe S			
	Parking brake is set		
	☐ Transmission is in neutral: (clutch is depressed if equipped)		
	☐ Start engine and ABS Light came on and went off		
Gauge	es:		
	☐ Oil Gauge: The gauge is working, rising to or at proper operating range, and there are no warning lights.		
	Temperature Gauge: The gauge is working, rising to or at proper operating range, and there are no warning lights.		
	☐ Ammeter/Voltmeter: The gauge is working, the volts are between 12 and 14 volts, and there is no warning lights		
	Air Gauges (2): The gauges are working there are no warning lights (mention if wa	g, rising to or at proper operating range, and arring is going off).	



Training Academy

Division of Maintenance and Operations

I will now start my brake test:

Wheels chocked/In flat area where you will not roll
Bring pressure up to governor cut out: Typically around 125psi (listen for the Pshhh!)
Turn Engine off, Key on, Parking Brake Pushed In
1 - Applied Test (leaks): Depress brake pedal, time for one minute, and cannot lose more than 3 psi for Class B and 4 psi for Class A
2 - Low Pressure Warning Test: Fan the brake pedal, by 60psi the warning light and buzzer should come on.
3 - Parking Brake Pop-Out Test: Keep fanning until the parking brake pops out between 20-40psi. Watch the valve not the gauge!
Safe Start, bring pressure up to the governor cut out.
4 - Parking Brake Tug Test: Leave Parking Brake pulled out, put truck in gear, depress accelerator pedal a little to "tug" on parking brake. Truck should not move. Put back in neutral.
5 - Service Brake Test: (Remove wheel chocks) Push in parking brake, put in gear, roll forward to 5mph, stop with hands lightly on steering wheel, ensure truck does not pull right or left.
Put the truck in neutral, set the parking brake.

I am now done with my parking brake test and pre-trip inspection.